


REPLACEMENT INSTRUCTIONS FOR UPPER SUPPLY ASSEMBLY


Part Number B8100-02

B8100-02

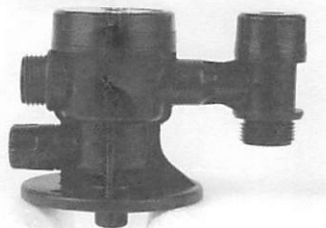


Step 1. Turn off the water supply and flush toilet normally to relieve any water and air pressure.

Step 2. Disconnect the quick connect supply line from the Upper Supply to the FVC by loosening the plastic nut and rotating the locking tab of the FCV careful not to drop O-ring. Remove the quick connect supply line and set it aside (see picture 1)

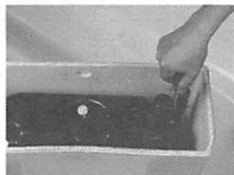

Step 3. Locate and remove the 4 phillips screws that hold the Upper Supply Assembly in place. Using a phillips screwdriver remove the 4 stainless steel screws, careful not drop it into toilet tank. (see picture 2)

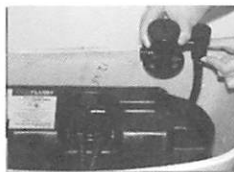

Step 4. Next remove the upper supply body from the nut that is crimped to black hose (lower supply) by rotating counter clockwise.

Step 5. Put the old upper supply assembly aside and remove old o-ring out of the hole located on the vessel.

Step 6. Get the new upper supply and remove nut, next re-install body upper supply body to the nut attached to crimped black hose (lower supply) by turning clockwise until tight. Make sure o-ring on post sticking out of base of Upper Supply, place post into hole and align the 4 holes, put screw's back into with Philips screwdriver (do not over tighten), reconnect quick connect hose and turn on water. Look for any leaks.