



REPLACEMENT INSTRUCTIONS FOR FLUSH CONTROL VALVE

Part Number B8106-06 (Handle Not Included)

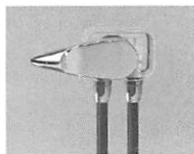


Front View Left Side Facing

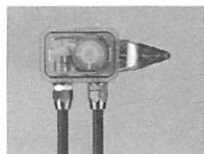

Back View

Step 1. Shut off water and flush to relieve any water and air pressure in the vessel.

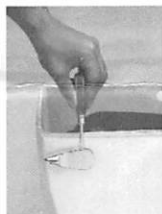

Step 2. Remove flush handle by pulling outward on the flush handle. If necessary, the use of a screw driver may be needed to pry the flush handle from the Flush Control Valve, being careful not to damage the flush handle and cling tank.



Step 3. Remove the outside nut and washer. This will expose the threads of the Flush Control Valve and permit its removal.



Step 4. Rotate the locking tabs of the Flush Control Valve lines from the flush valve cartridge by gently pulling tuck. Set the FCV aside and reverse the procedure to install the replacement. Install the flush lever handle by aligning the handle with the FCV and gently push until the handle is locked into position.