



## REPLACEMENT INSTRUCTIONS FOR FLUSH CONTROL VALVE

Part Number B8100-04 (Handle Not Included)

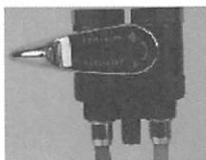

Front View Left Side Facing

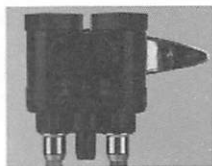

Back View


Step 1. Shut off water and flush to relieve any water and air pressure in the vessel.



Step 2. Remove flush handle by pulling outward on the flush handle. If necessary, the use of a screwdriver may be needed to pry the flush handle from the Valve, be careful not to damage the china tank and flush handle.(see picture 1)



Step 3. Remove the outside nut and washer. This will expose the threads of the Dual Flush Control Valve and permit it's removal.

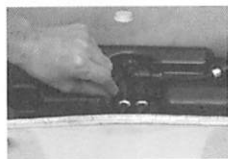

Step 4. Rotate the locking tabs of the Valve lines from the flush valve cartridge . Set the Dual Flush Control Valve aside and reverse the procedure to install the replacement. Install the flush lever handle by aligning the handle with the valve and gently push until the handle is locked into position.