


# REPLACEMENT INSTRUCTIONS FOR UPPER SUPPLY ASSEMBLY


Part Number B8106-02 (B8100-02A Not Included)



Step 1. Turn off the water supply and flush toilet normally to relieve any water or air pressure.

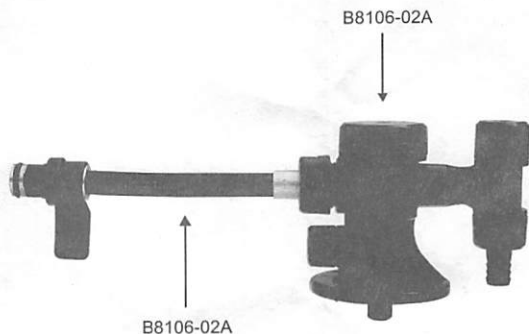

Step 2. Disconnect the quick connect supply line from the Upper Supply to the FVC by loosening the plastic nut and rotating the locking tab. Remove the quick connect supply line and set it aside.

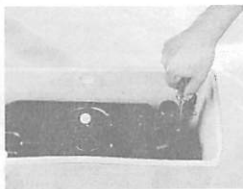

Step 3. Locate and remove the 4 screws that hold the Upper Supply Assembly in place. Using a screw drive remove the 4 stainless steel screws. (Retain the screws for replacement of the new Upper Supply)



Step 4. Now loosen the hose clamp and remove the hose from the barbed fitting by gently wiggling the supply line back and forth.

Step 5. Put the Upper Supply Assembly aside and make sure that the o ring is located in the insert hole of the vessel.

Step 6. Replace & install the Upper Supply Assembly. Reconnect the supply lines from the Lower Supply Assembly and the supply line nut to the FVC.